






Uranos TS-212

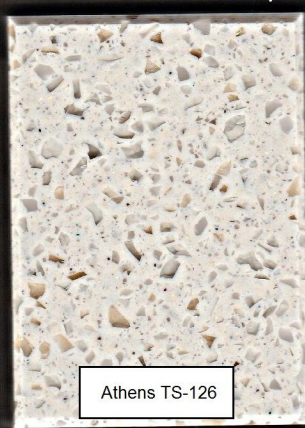


Athens TS-126

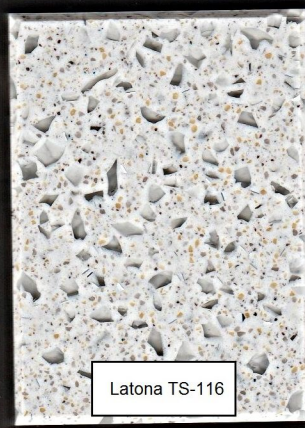


Latona TS-116

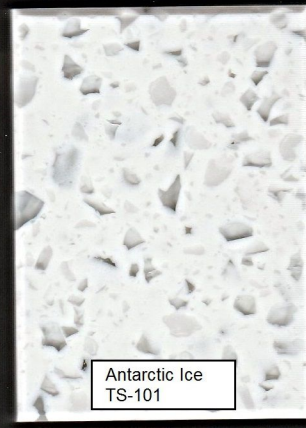


Antarctic Ice  
TS-101

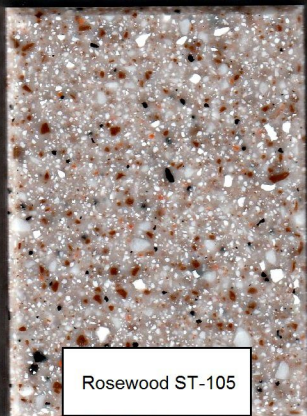


Rosewood ST-105

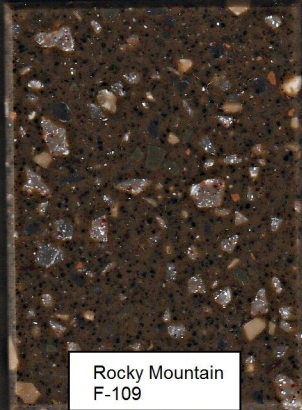


Rocky Mountain  
F-109

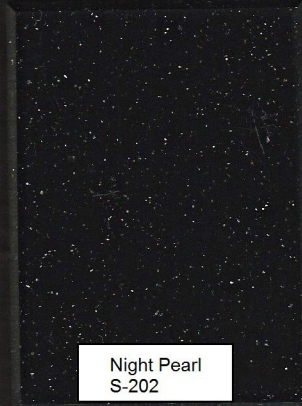


Night Pearl  
S-202

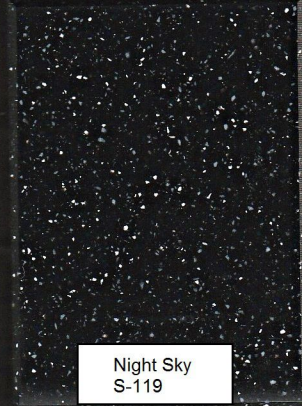


Night Sky  
S-119

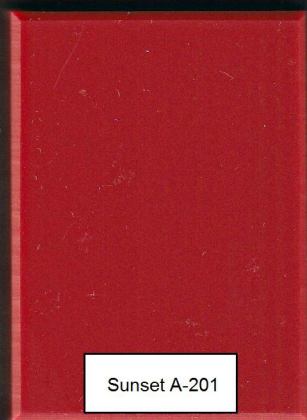


Sunset A-201

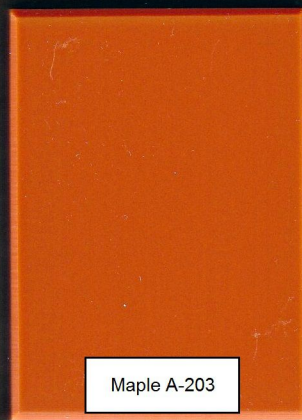

Maple A-203

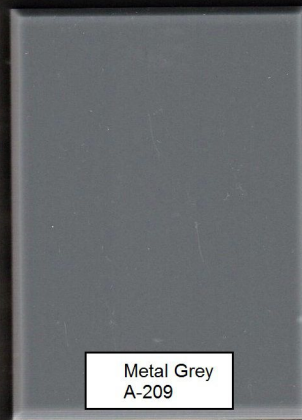


Metal Grey  
A-209

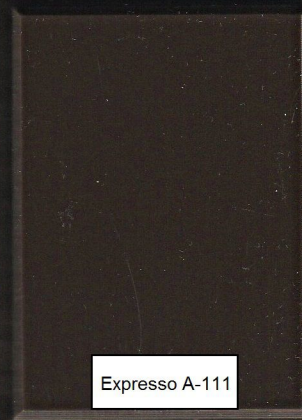


Espresso A-111




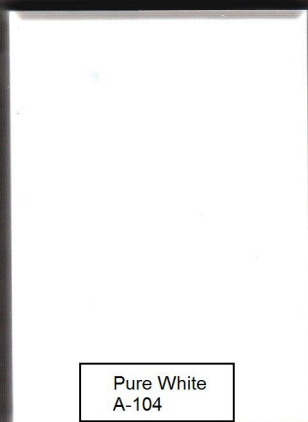


Pure White  
A-104

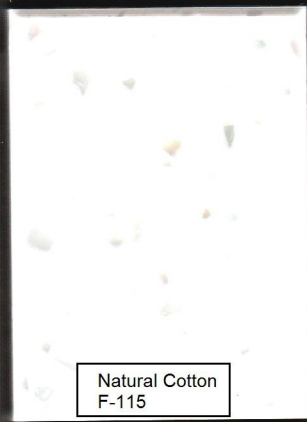


Natural Cotton  
F-115

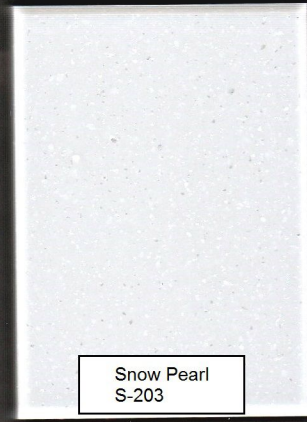

Snow Pearl  
S-203

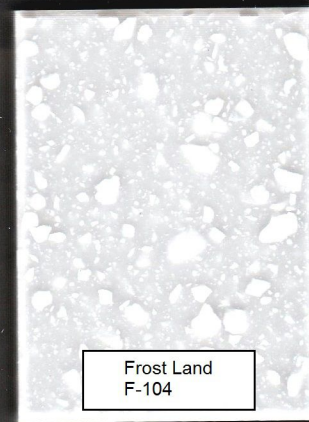

Frost Land  
F-104

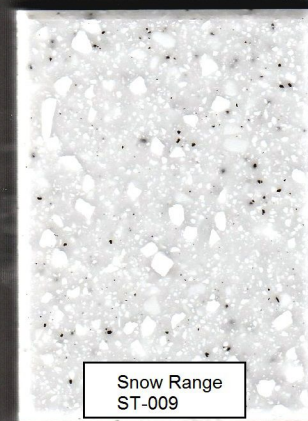


Snow Range  
ST-009



Snow Brick  
ST-012




Beige Wales  
F-106

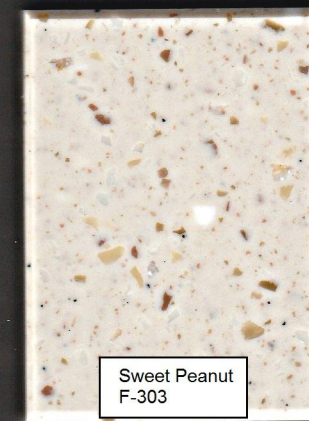


Sweet Peanut  
F-303




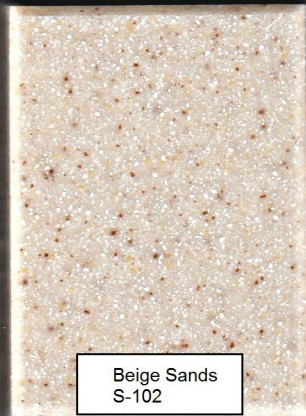


Beige Sands  
S-102

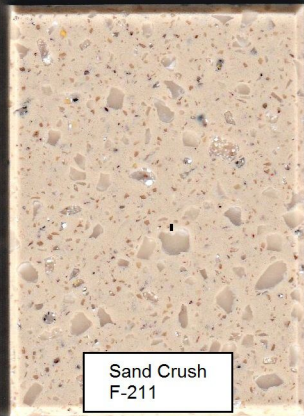


Sand Crush  
F-211

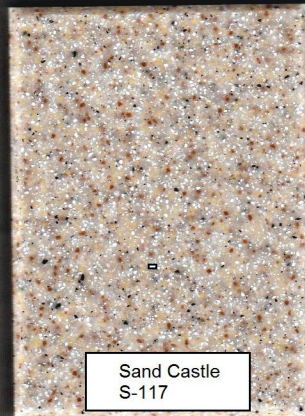


Sand Castle  
S-117

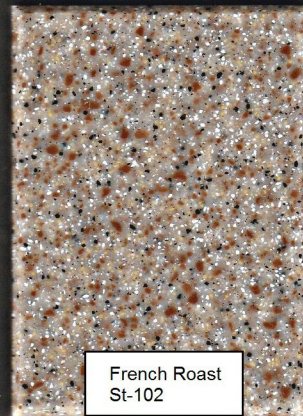


French Roast  
St-102

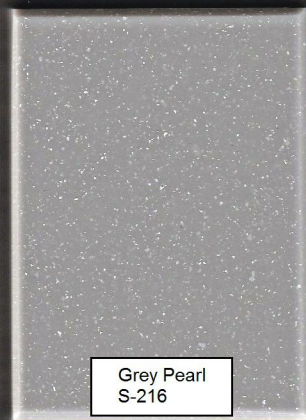


Grey Pearl  
S-216

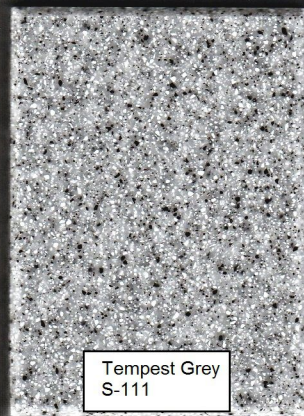

Tempest Grey  
S-111

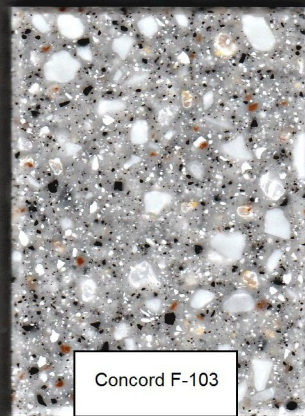

Concord F-103

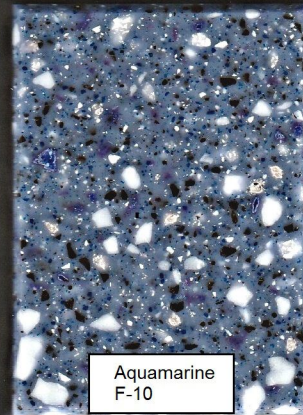

Aquamarine  
F-10